

Portable Access Control Folding Gates



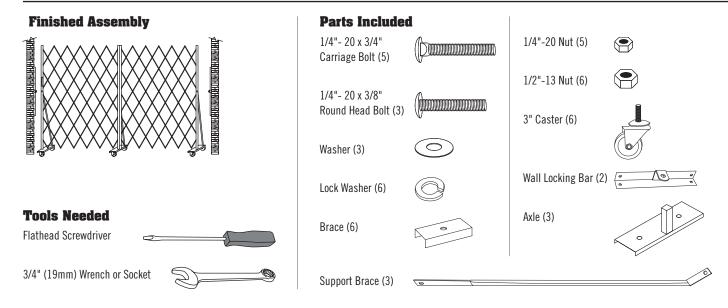


INSTALLATION INSTRUCTIONS


1) Bolt both sides of gate together at the top, middle and bottom by using the carriage bolts, washers and small nuts. (See Figure 1)

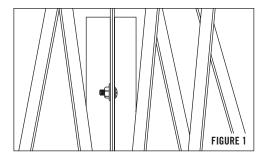

2) Insert each gate end into axle support. Insert round head bolt and tighten with screwdriver. (See Figure 2)

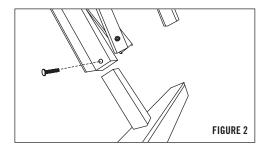

3) Attach casters to axle supports. Put caster through the brace and opening in the axle support and tighten with lock washer and large nut. Use a 3/4" wrench to tighten. (See Figure 3)

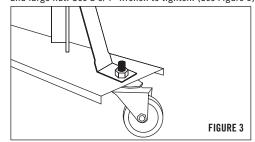


PORTABLE ADD-ON UNIT:

Repeat steps 1-3

TO MOVE GATE:

Collapse gate, lock axle locking bars into pins and roll to desired location. (See Figure 4)

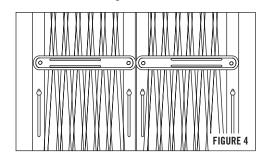

TO MOUNT GATE:

Align padlock holes and mount wall locking bar to wall. (See Figure 5)

